 




# HP Media Center 876x Optical Drive Replacement

This guide will show you how to remove the optical drives from the tower console of the HP Media Center 876x.

Written By: Balakrishnan Pillai

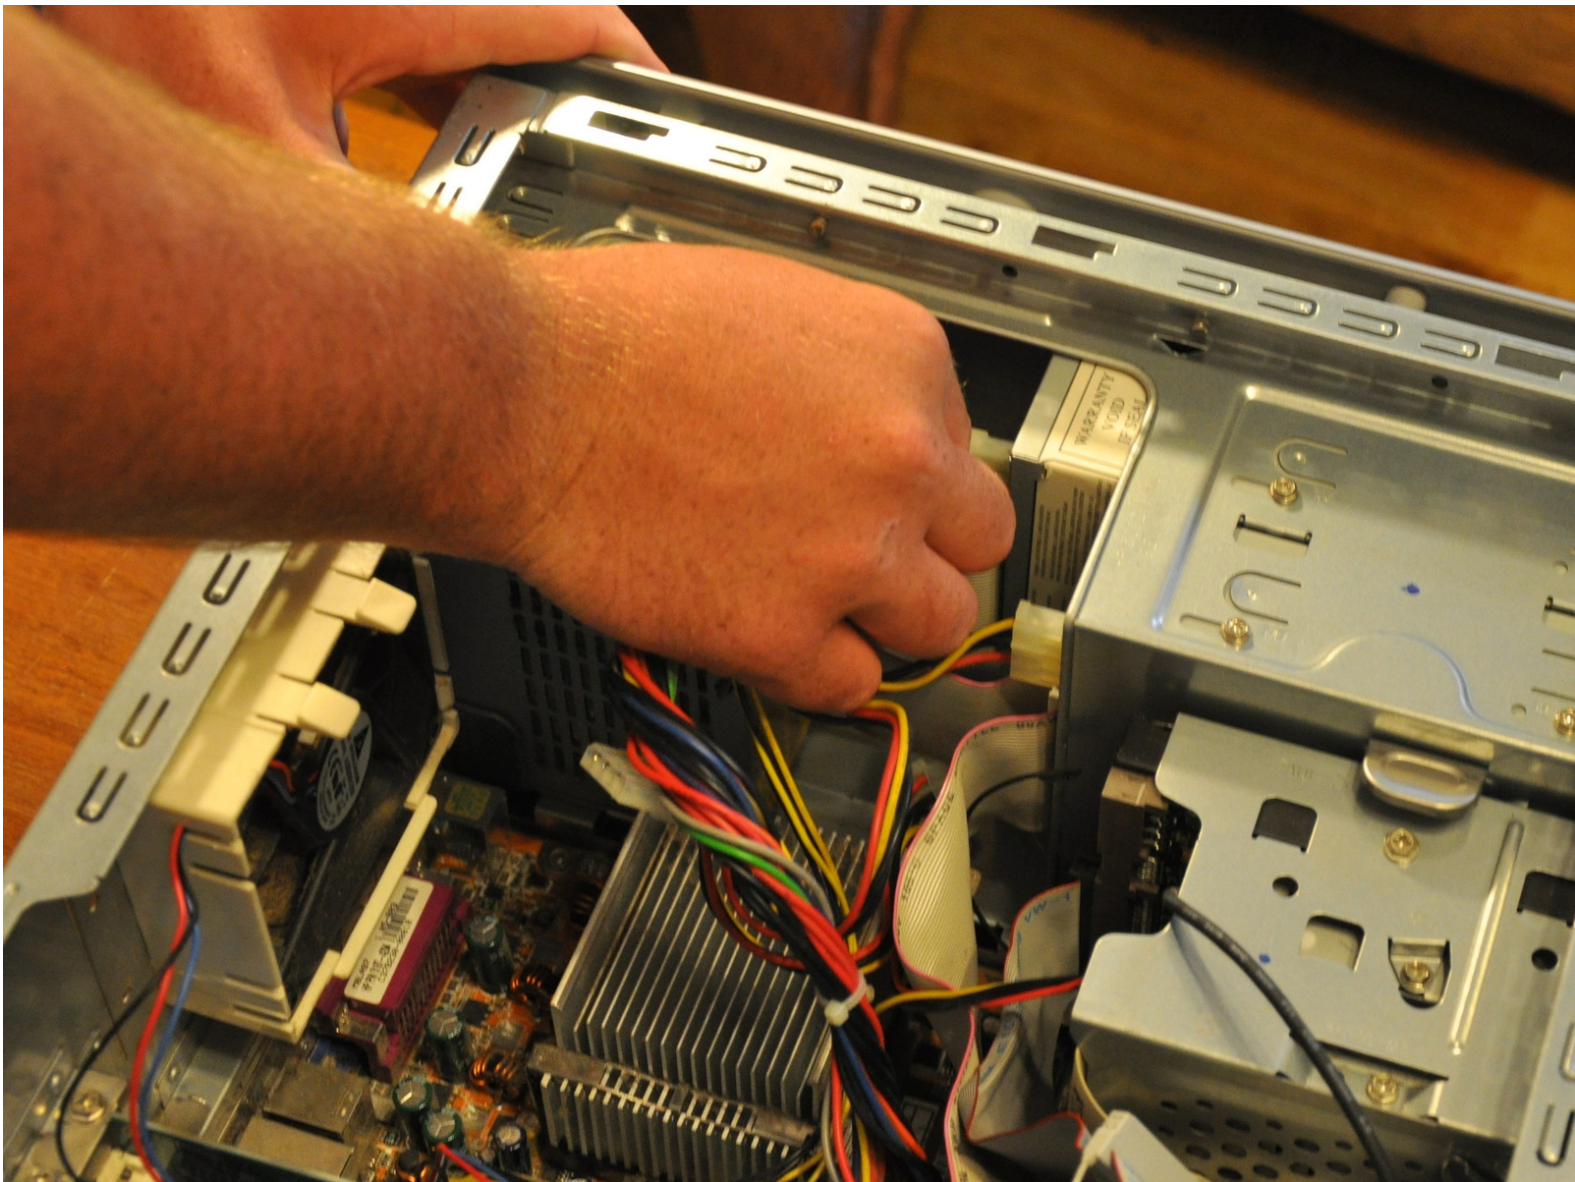

## INTRODUCTION

The optical drive (also known the CD drive) is one of the most frequently used parts of the HP Media Center 876x. As a result, damages are common and often replacement is necessary.

---

 


### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-






## Step 1 — Side Panel

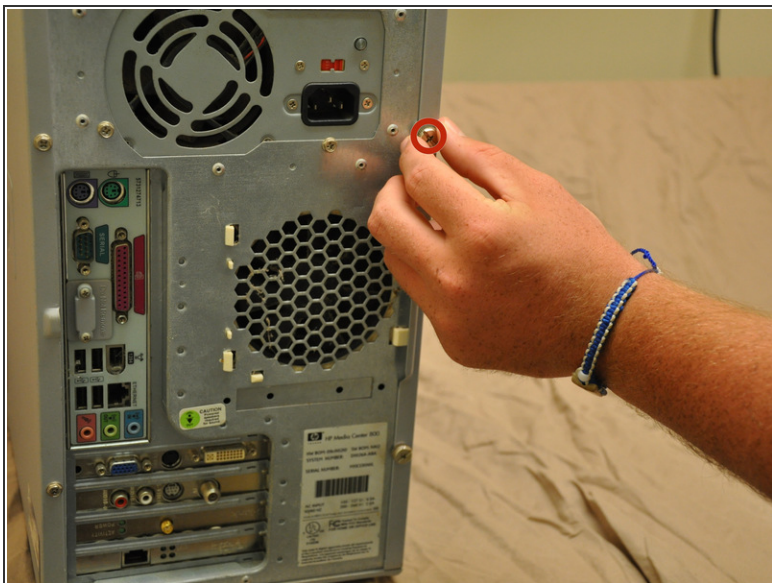

- Remove the two (9 mm) hand screws on the back panel.



## Step 2

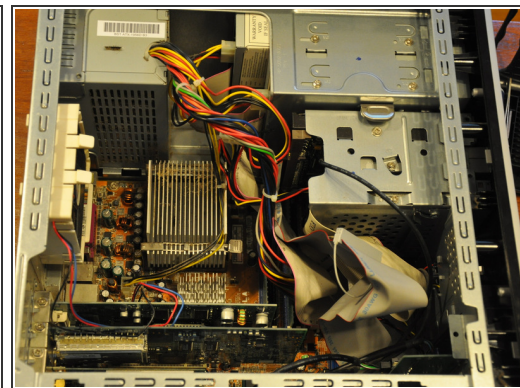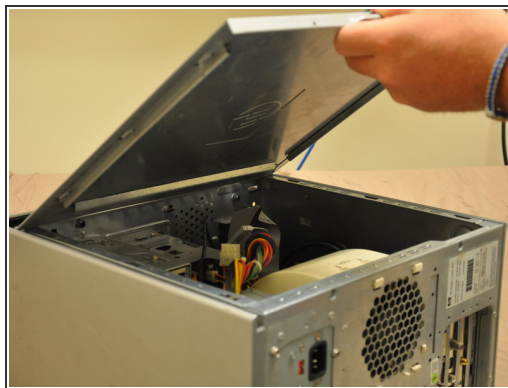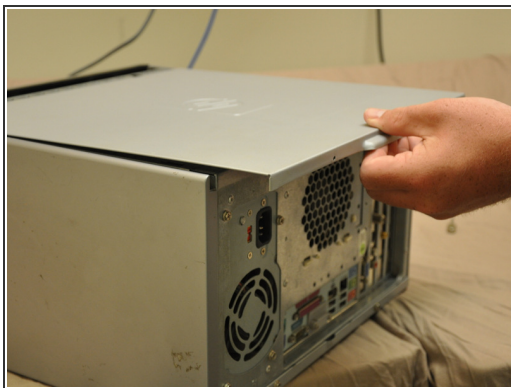   

- Place the tower on its side.
- Slide the side panel horizontally to detach, and pull upward to remove.




## Step 3 — Front Cover

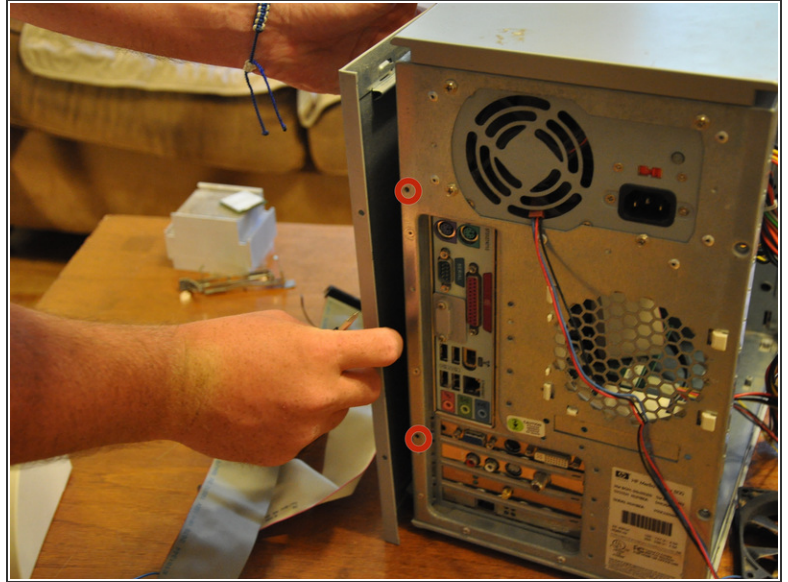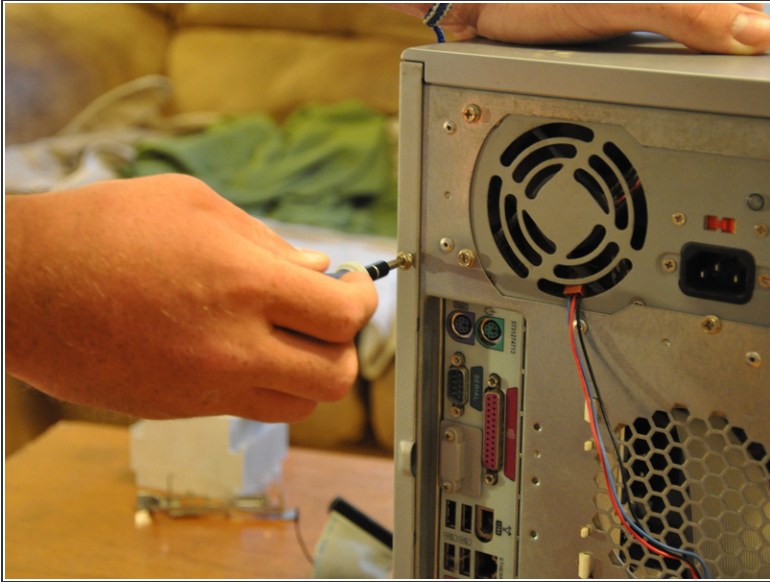  

- Orient the tower vertically.
- Using the #0 Phillips head screwdriver, unscrew and remove the two (5 mm) screws that fasten the remaining side panel to the tower.
- Slide the side panel out of its notches, and pull it gently off of the tower.

## Step 4

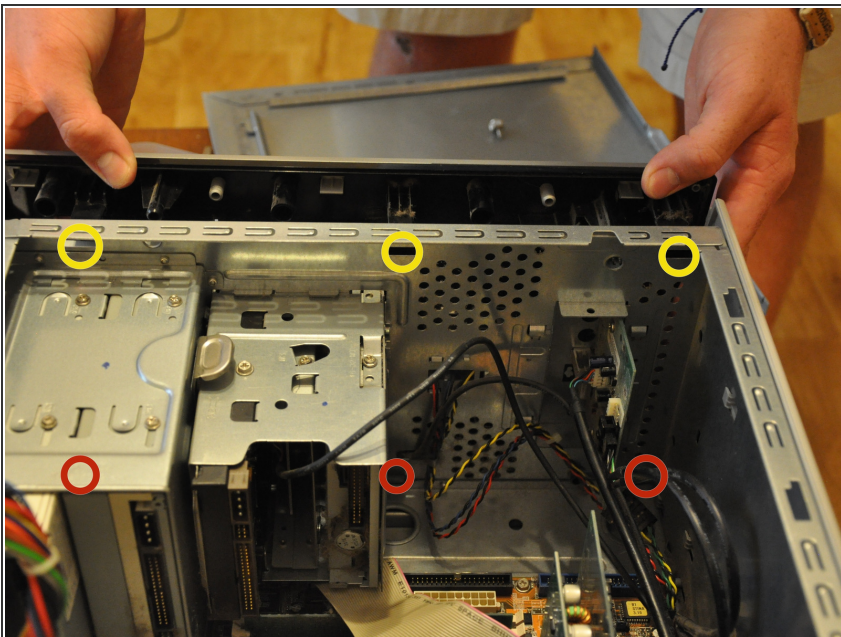 

- Gently move the tower so that it is in the horizontal orientation.
- Press down the black tabs (proximal to you) that fasten the front panel to the tower.
- Press down on the distal, black tabs (symmetric with respect to the previous tabs).
- Pull front panel forward slightly.






## Step 5



   
- Orient the tower vertically.
- The front panel will come off in a hinge-like fashion, exposing the drives underneath.

## Step 6 — Optical Drive

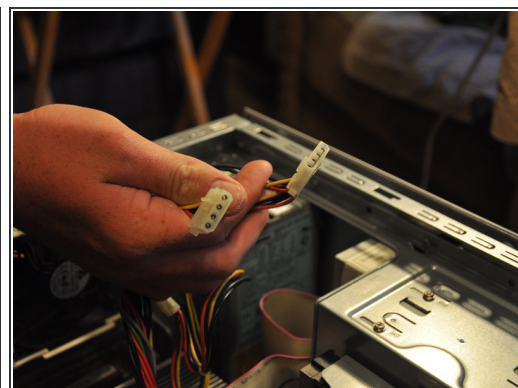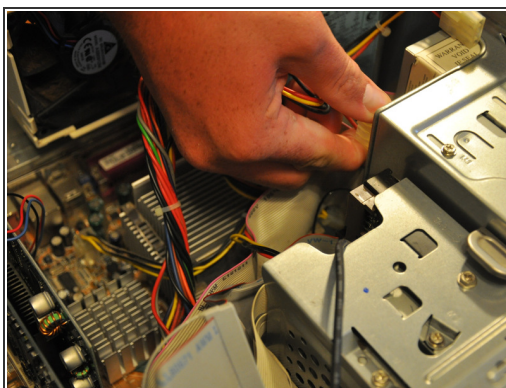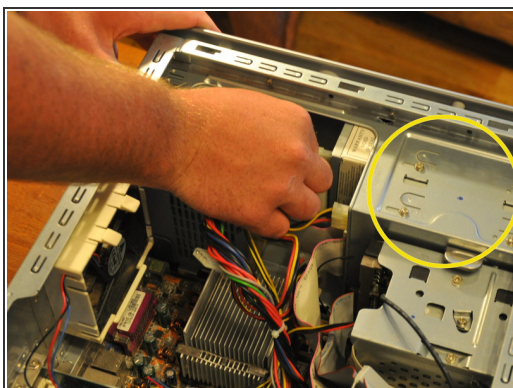


- Identify the optical drive.
- Pull the molex connectors out of the posterior end of the optical drive.

## Step 7

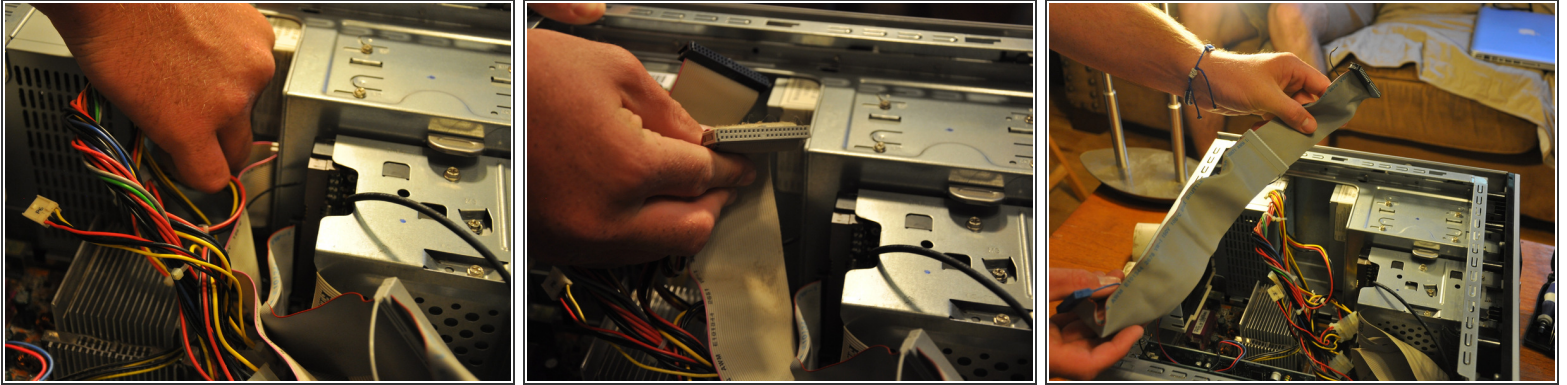 

- Pull the "ribbon cable" out of the posterior end of the optical drive.



## Step 8

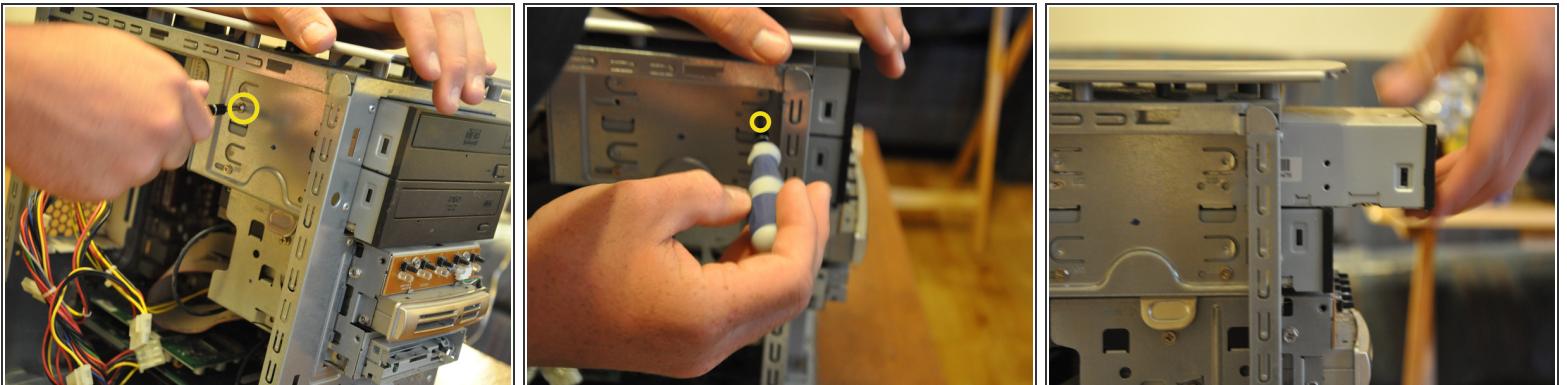 

- Using the #0 Phillips head screwdriver, unscrew the two (5 mm) screws that fasten the optical drive into its port.
- Gently pull the optical drive through the frontal cavity.



## Step 9

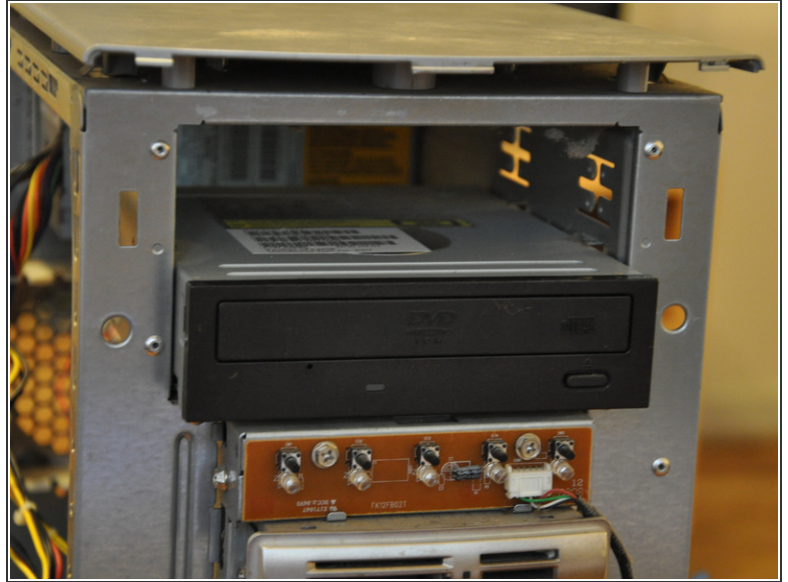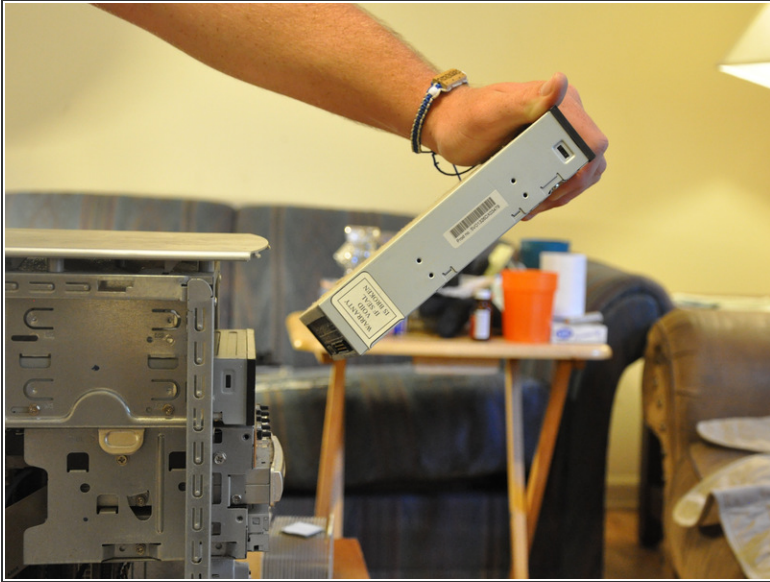  

- Remove the optical drive completely from its port.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 09:12:14 PM.